


VENTURE DESIGN

HOME & INTERIOR

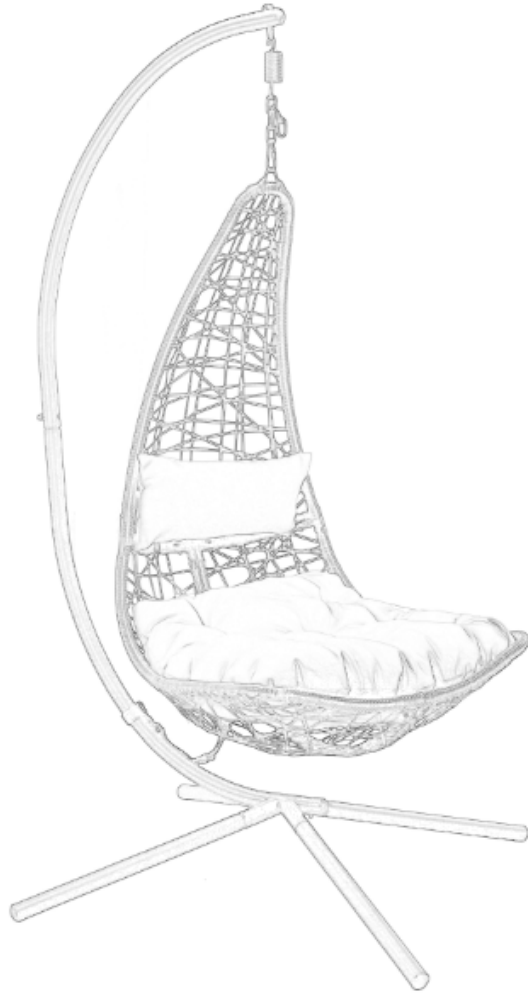


1018-408












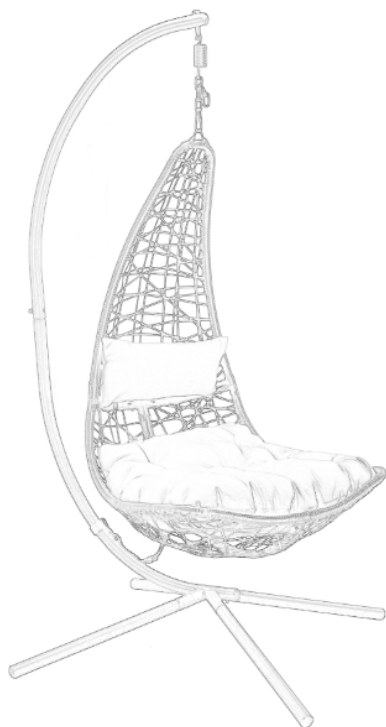





Edinburgh Hanging chair

Monteringsanvisning - Assemblyinstruction - Einbauzeichnung



1018-408 EDINBURGH HANGING CHAIR ASSEMBLE INSTRUCTION









| NO | Picture | QTY | NO | Picture | QTY | NO | Picture | QTY |
|----|---|------|----|---|---------------|----|---|---------|
| A |  | 1PC | G |  | 1PC | M |  | 1PC(M8) |
| B |  | 1PC | H |  | 1PC | N |  | 1PC(M6) |
| C |  | 1PC | I |  | 1PC(M8*50MM) | O |  | 1PC(M6) |
| D |  | 4PCS | J |  | 4PC(M8*20MM) | P |  | 1PC(M4) |
| E |  | 1PC | K |  | 7PCS(M6*45MM) | Q |  | 1PC |
| F |  | 1PC | L |  | 2PCS(M6*40MM) | | | |

PLEASE KINDLY NOTE THAT AFTER ASSEMBLED. THEN TIGHTEN ALL THE SCREWS! IF YOU FELL IT'S HARD TO SCREW IN,PLEASE TAKE BACK A UTTLE,THEN TRY AGAIN!

1018-408

Assembly Instruction

Thank you for purchasing this quality product. Be sure to check all the packing material carefully for smart parts, which may have come loose inside the carton during shipment. Count all the parts and hardware, compare with the parts list below to be sure all the parts are present.

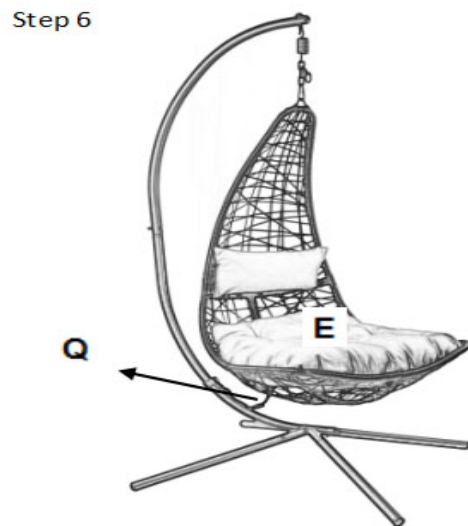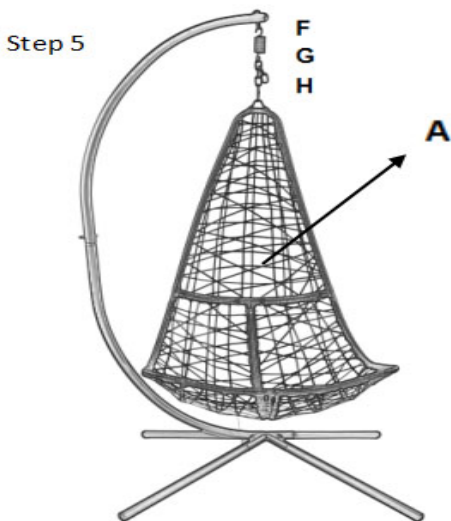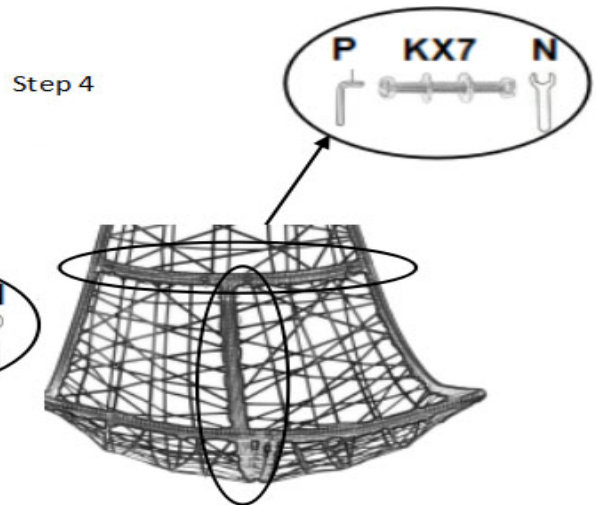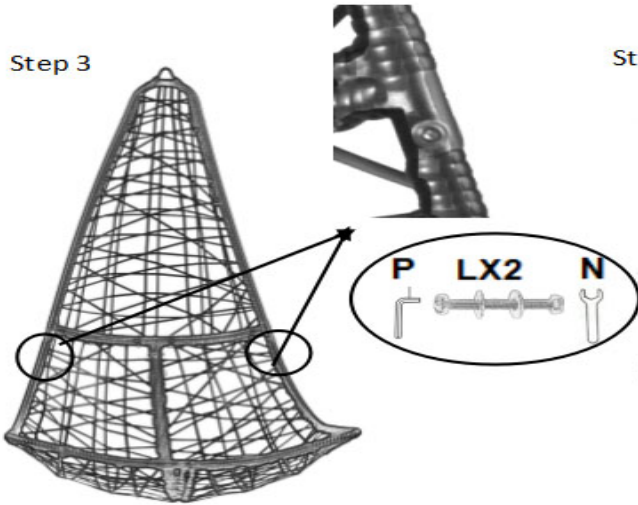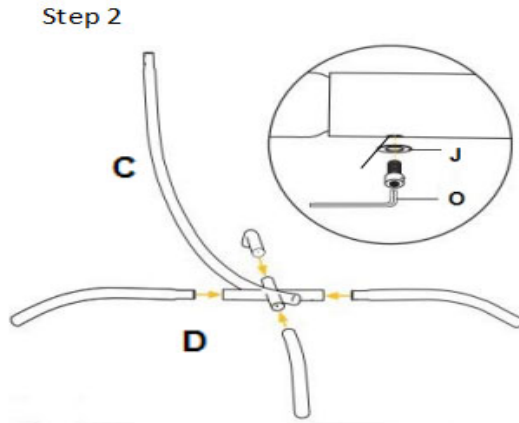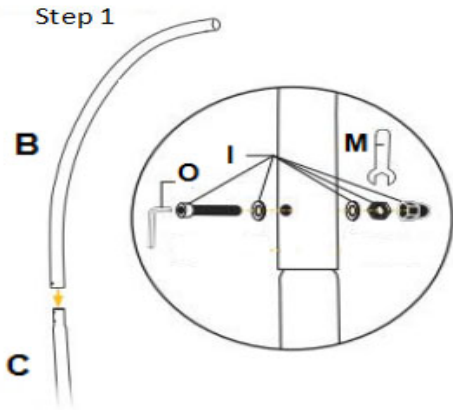

VENTURE DESIGN
HOME & INTERIOR